


INSTRUCTION MANUAL

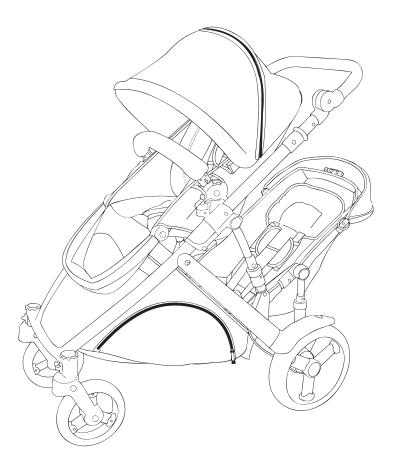

IMPORTANT: KEEP THIS BOOKLET IN A SAFE PLACE FOR FUTURE REFERENCE. Note: Second Seat, Bassinet, Infant Carrier and Footmuff are all sold separately.



INDEX

General Warnings	3
Bassinet, Infant Carrier & Second Seat Warnings	
Features	
Parts	
1. Stroller frame opening	
2. To fit and remove the wheel guards	
3. Rear wheel fitting and removal	
4. Front wheel fitting and removal - 4 wheel model	10
5. Front wheel fitting and removal - 3 wheel model	
6. Swivel/fixed front wheel operation - 4 wheel model	
7. Swivel/fixed front wheel operation - 3 wheel model	12
8. To operate the brake	
9. To adjust the pivotal handle - 7 positions	
10. To fit the accessory bag.	
11. Fitting the stroller seat to the frame	15
12. To fit the armbar	
13. Adjusting the backrest	
14. Stroller seat removal	
15. To face the seat in opposite direction	
16. To adjust the head pillow & shoulder harness height	18
17. To fit, use and remove the canopy	
18. Harness adjustment.	
19. Tether strap	
20. To fit the reversible seat pad.	
21. To use the reversible shoulder pads	
22. Adjustable leg support	
23. To fit the bootcover.	
24. To use the basket.	
25. To use the footmuff.	
26. To fit the mesh cover.	
27. To fit the raincover	
Bassinet Warnings	
28. Bassinet assembly, fitting & removal	
Infant Carrier Warnings.	
29. Infant Carrier fitting and removal	
30. To fold/close the stroller	
Second Seat Warnings	
31. To use the Second Seat	
31.1 To fit Second Seat to the stroller	
31.2 To adjust into seating positions	
31.3 To fit, use and remove the canopy	
31.4 Harness adjustment	
31.5 Reversible shoulder pads.	
31.6 To adjust the head pillow and harness shoulder strap height position	
31.7 To fold the Second Seat while attached to the frame	
31.8 To remove Second Seat from the frame	
31.9 To use the adaptors with the Stroller seat	
31.10 To use the adaptors with the Infant Carrier	
Care and maintenance	
Warranty	

WARNINGS

READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THE Stroller. ALWAYS FOLLOW THE INSTRUCTIONS. THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

GENERAL WARNINGS:

- Check that all safety locks are engaged before placing a child in the Stroller.
- Ensure your child is secured with a correctly adjusted safety harness.
- Do not leave children unattended.
- Always apply the brakes when parking the Stroller.
- Never let go of the Stroller when parked on an incline because it may slide.
- When making adjustments to the Stroller, ensure that your child's body is clear of any
 moving parts, otherwise they may be injured.
- Remove child from the Stroller before going up or down stairs or escalators.
- Remove your child from the Stroller seat before changing the seat unit direction.
- Do not lift the Stroller by the armrest bar because it may disengage.
- Do not carry additional children on the Stroller.
- Do not allow children to stand on the seat.
- Do not hang bags or goods from the handle as this could cause the Stroller to tip over.
- Do not place more than 4kgs in the basket, 1kg in the seat backrest pocket, 1kg in the Bassinet pocket or 1kg in the Accessory Bag.
- To prevent the risk of the Stroller catching fire, do not park it near an exposed heat source such as a radiator, open fire, barbecue, etc.
- It may be unsafe to use accessories other than those tested and approved by Britax.
- Remove Bassinet from the Stroller frame before folding Stroller.
- The weight of the child using this product should not exceed 17kgs for the Stroller and 9kg for the Bassinet, 9kg for the Infant Carrier or 15kg for the Second Seat.

NOTE:

The upright positions are not suitable for use with children less than six months old. The lowest recline position should be used for babies, and then the backrest can be adjusted to a more upright position as the child grows older and is able to support it's head without assistance.

Always lock the front swivel wheels when on uneven surfaces to minimize wheel wobble. The canopy will not give your child total protection from the harmful rays of the sun.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

WARNINGS

BASSINET WARNINGS:

- Always remove your child from the Bassinet before fitting or removing from Stroller.
- The Bassinet must be removed from the frame before folding.
- Do not lift Stroller by the Bassinet. Only use Strider Bassinet with the Strider Plus Stroller. Use a harness once the baby can sit up unaided.

INFANT CARRIER WARNINGS:

- Do not leave the child in the carrier for extended periods.
- The carrier is designed to provide mobility outside of the car but it should not be used instead of an appropriate cot.
- Ensure the carrier must be correctly fitted and locked into the Stroller.
- The Infant Carrier must only be used with an SC or Steelcraft Stroller with compatible attachments.
- To be used only in a rearward facing position, that is facing toward the Stroller handle.
- Use only for a child weighing up to 9kgs and with a length of up to 700mm.
- Remove Infant Carrier from Stroller frame before folding.
- Always secure your child with the harness provided.

SECOND SEAT WARNINGS:

- The Second Seat cannot be used in conjunction with the Bassinet
- The Second Seat must only be used with a SC or Steelcraft Stroller with compatible attachments.
- Second Seat to be used only in a forward facing position. That is connected to the rear of the Stroller and facing towards the Stroller.
- The Second Seat must be correctly fitted and locked onto the Stroller.
- Use only for a child weighing up to 15kgs.
- A five-point harness is provided to restrain your child. To secure the child in the harness, push buckles (A) through the buckle rings (B) and into the buckle housing (C) until the buckle prongs snap into position. Carefully adjust the harness by pulling the sliders (D) until the desired fit is achieved in the lap, shoulder and crotch straps. Always adjust the harness when changing the seating position of the child. To release the buckle, squeeze the top and bottom buckle prongs (A).

STROLLER FEATURES

- S1. Adjustable & removable canopy
- S2. Pivotal handle
- S3. Visor
- S4. Frame fold mouldings (on both sides)
- S5. Canopy mesh (under zip)
- S6. Arm bar
- S7. Removeable & reversible Stroller seat
- S8. Stroller seat release buttons (on both sides)
- S9. Frame sockets (on both sides) accepts Stroller seat, Infant Carrier, bassinet or adaptors.
- S10. Frame lock
- S11. Wheel guards
- S12. Side access zip pocket (on both sides)
- S13. Adjustable head pillow
- S14. Reversible seat pad
- S15. Reversible shoulder pads
- S16. 5 point harness
- S17. Crotch pad
- S18. Adjustable footrest
- S19. Front access zip pocket (4 wheel model only)
- S20. Front wheel release
- S21. Swivel wheel lock


The 3 wheel model has similar features, however some features are in different locations as shown right.



STROLLER FEATURES




STROLLER PARTS

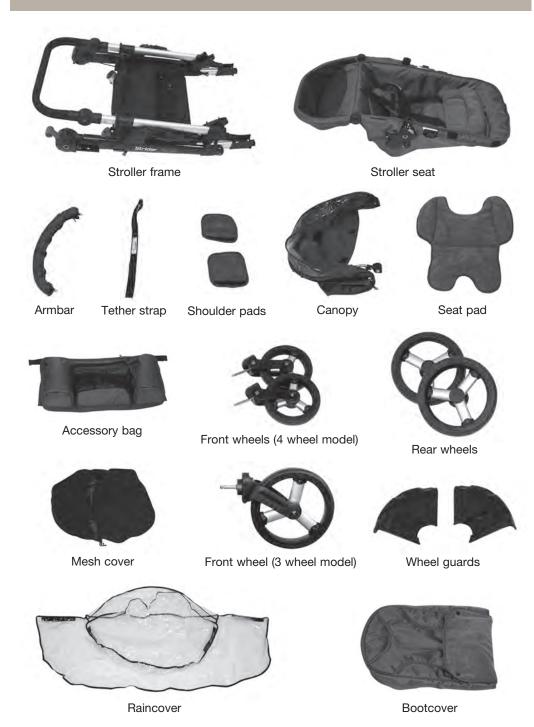

1. STROLLER FRAME OPENING



A Lay the frame on a flat surface.

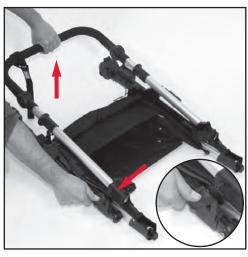

B Release the frame lock and lift up by the handle to partially open the frame.



C Continue to lift the handle up to open the frame until the left and right side frame mouldings engage and lock together.



D Push down on the handle to confirm the frame is locked open.

NOTE: To fold/close the frame see Section 30.

2. TO FIT AND REMOVE THE WHEEL GUARDS



A Position the left and right guards beside the frame as shown.



B Fit each guard onto the moulding at the base of the leg tubes. Push down until they lock into position.



C Pull on each guard in the direction shown, to make sure they are locked on correctly.

3. REAR WHEEL FITTING AND REMOVAL



A To fit the rear wheels, align the wheel axle/ rod with the hole in the wheel moulding. Push the rear wheel into the wheel moulding until it locks into position.



B Pull on the rear wheel to make sure it is locked on. Repeat steps A & B to fit the other rear wheel.



C To release the rear wheels, press down and hold the metal release tab. Then slide the wheel out and remove. Repeat for the other side.

4. FRONT WHEEL FITTING AND REMOVAL - 4 WHEEL MODEL



NOTE: Tip the frame backwards for more convenient assembly.



A Take each front wheel assembly and push the axle into the wheel housing, until it locks in.



B Pull on both front wheel sets to make sure they are locked on.



C To remove the wheel assembly, turn top knob to the left to unlock and release the wheel.

5. FRONT WHEEL FITTING AND REMOVAL - 3 WHEEL MODEL




NOTE: Tip the frame backwards for more convenient assembly.



A Take the front wheel assembly and push the axle into the wheel housing, until it locks in.



B Pull on the front wheel to make sure it is locked on.

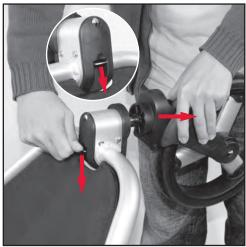

C To remove the wheel assembly, push the metal tab all the way back to unlock, release and remove the wheel.

SWIVEL/FIXED FRONT WHEEL OPERATION - 4 WHEEL MODEL

NOTE: Always lock the front swivel wheels when on uneven surfaces.



A For swivel wheel mode, slide both red latches up until they lock it into position.



B To lock the front wheels into the fixed position, slide both red latches down until they lock.



C The front wheels will automatically lock into the fixed position when you move the Stroller forward by approximately one metre.

7. SWIVEL/FIXED FRONT WHEEL OPERATION - 3 WHEEL MODEL

NOTE: Always lock the front swivel wheel when on uneven surfaces.



A For swivel wheel mode, lift the lever into the upright position until it locks.



B To lock the front swivel wheel into the fixed position, press in the button on the swivel release moulding. The lever will rotate downwards.



C The front wheel will automatically lock into the fixed position when you move the Stroller forward by approximately one metre.

8. TO OPERATE THE BRAKE

WARNING - Always apply the brakes when parking the Stroller. The Stroller may roll away even if left unattended for a few moments.



A To lock both rear wheels, press the red brake lever all the way down. Push the Stroller back and forth to confirm the wheels are locked.



B To unlock both rear wheels, firmly lift up the brake lever all the way until it locks into the up position.

9. TO ADJUST THE PIVOTAL HANDLE - 7 POSITIONS



A There is an adjusting button on the inside of each handle moulding.



B Press both buttons in together and hold. Now rotate the handle up or down to the desired height position.



C When the desired height position has been achieved, release both buttons.

10. TO FIT THE ACCESSORY BAG

NOTE: Adjust the pivot handle up to create more assembly space (refer to section 9).



A The bag firstly needs to be attached to the pile strip on the inside of the Stroller basket.



B Hold the bag up by the black back flap on the rear side of the bag. Note the hook strip on the edge of the flap.



C Attach the hook strip to the pile strip on the inside of the basket. This will help to keep it in place. Note: this flap also contains two pockets.



D Now thread each hook strap through the frame moulding as shown.



E Attach each strap to the pile strips sewn on the bag to hold in place.



F The accessory bag is now ready for use. Return the pivot handle to the desired position.

11. FITTING THE STROLLER SEAT TO THE FRAME

WARNING - Always remove your child from the Stroller seat before installing, removing or changing seat direction.

NOTE: The seat is reversible so it can face in either forward or rearward position.



A Hold the Stroller seat over the frame.



B Align the Stroller seat mouldings on both sides, over the frame connection sockets located in the middle of the Stroller.



C Push the Stroller seat down until both seat mouldings are locked into the frame sockets.




D Pull up on both sides of the Stroller seat to make sure it is securely locked into the Stroller frame.

12. TO FIT THE ARMBAR

WARNING: When a child is in the Stroller, keep the armbar attached to the frame at all times.




A One side at a time, align the armbar pin with the frame moulding as shown.

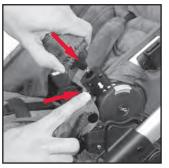

B Press in and hold the engaging / release button, then insert the pin all the way in.



C Release the button, then pull on the armbar to make sure it is engaged. Repeat steps A, B & C for the other side.

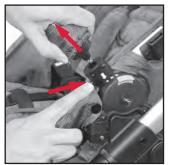

D The armbar can be released on one side and rotated out of the way to assist with putting a child in the Stroller. To do this, press in and hold the release button, then disconnect one side of the armbar.



E Rotate the armbar clear of the Stroller seat. Lock the armbar back into position after fastening the child in the harness.

13. ADJUSTING THE BACKREST

CAUTION: Ensure that your child's limbs are inside the seating area before adjusting the backrest. Be prepared to support your child's weight when adjusting the backrest



A To adjust up or down, fully lift the adjusting lever all the way up.



B Continue to hold the lever up and adjust the seat to any one of three positions.



C There are 3 indicated seat positions while the seat is facing forward or rearward.

- 1. Upright seating position
- 2. Semi recline seat position
- 3. Layback seat position

14. STROLLER SEAT REMOVAL

WARNING - Always remove your child from the Stroller seat before removing, installing or changing seat direction.



A To remove the seat, firstly, place the seat in the most layback position #3, see section 13C.



B Hold the seat or armbar on both sides with your hands. Then with your finger or thumbs, press down and hold the grey buttons.



C While holding the grey buttons, lift the seat out of the frame.

15. TO FACE THE SEAT IN OPPOSITE DIRECTION.

WARNING: Always remove your child from the Stroller seat before changing seat direction.




A Refer to section 14 for removing the seat from the frame.



B Refer to section 11 for fitting the seat to the frame.

16. TO ADJUST THE HEAD PILLOW & SHOULDER HARNESS HEIGHT


NOTE: The head pillow has a small height adjusting range for additional comfort.

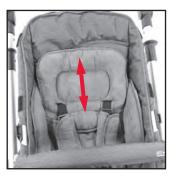

A The head pillow height is adjustable. The harness shoulder strap height also moves with the head pillow.



B Unzip the pocket located on the rear side of the Stroller seat to reveal the head pillow slider.

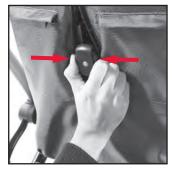

C Hold the slider and squeeze the two buttons together. Slide up or down to adjust the head pillow height as desired, then zip the pocket closed.

17. TO FIT, USE AND REMOVE THE CANOPY



A To attach the canopy, slide the canopy mouldings onto the frame mouldings until they connect together.



B Attach the canopy hook strips to the pile strips around the top of the frame for a secure fit.



C To adjust the canopy, open by pulling forward, or close by pushing it backward.



D For extra protection, pull visor out from under front of canopy.



E To expose the mesh section of the canopy, unzip the center section.



F The zip should be fully unzipped to expose the center mesh section.

17. TO FIT, USE AND REMOVE THE CANOPY - CONTINUED



G The window cover is kept in place by a hidden magnet located at the bottom of the window cover.



H To open the window cover, roll up the cover and secure with the elastic and toggle.




I To remove the canopy, pull the canopy off the frame mouldings.

18. HARNESS ADJUSTMENT

WARNING: Use this harness at all times.

WARNING: Buckle prongs (A) should always be fitted to buckle rings (B).

A five-point harness is provided to restrain your child. To secure the child in the harness, push buckles (A) through the buckle rings (B) and into the buckle housing (C) until the buckle prongs snap into position. Carefully adjust the harness by pulling the sliders (D) until the desired fit is achieved in the lap, shoulder and crotch straps. Always adjust the harness when changing the seating position of the child. To release the buckle, squeeze the top and bottom buckle prongs (A). To adjust harness height position, see section 16.

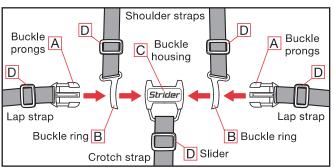




19. TETHER STRAP

WARNING: Use the tether strap to prevent the Stroller from rolling away.

NOTE: A tether strap is fitted to this Stroller, always place the loop over desired wrist when using the Stroller.

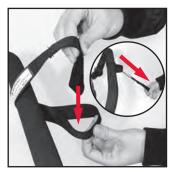

A If the tether strap is removed, attach by looping over the handle, open one end of the tether strap and insert the opposite end through the opening created. Pull until tether strap tightens around handle.



B Slide your hand through the tether strap whenever you use the Stroller. Hint: If tether strap is fitted in the centre of the handle, you can use it with either hand.



C If you want to use the tether strap with the other hand, slow to a stop and apply the brake (see section 8). Loosen the tether strap and slide to the desired side of the handle. Slide your hand through the tether strap before unlocking brake.

20. TO FIT THE REVERSIBLE SEAT PAD

NOTE: To assit with installing, release one side of the armbar, see item 12D and release the harness buckles.



A Fit the reversible seat pad by sliding it under the harness and head pillow. Note: Locate wider part of pad towards the head.



B Locate the reversible seat pad as shown.



C The reverse side of the seat pad has a different fabric pattern.

21. TO USE THE REVERSIBLE SHOULDER PADS

NOTE: The shoulder pads are reversible.



A Fit the reversible shoulder pads by fitting around the harness shoulder strap and attach the hook and pile.



B Repeat for the other reversible shoulder pad.



C The reverse side of the shoulder pad has a different fabric pattern. To reverse, undo the hook and pile and reattach on the reverse side.

22. ADJUSTABLE LEG SUPPORT



A To lower or raise leg support, press in and hold both left and right buttons.



B While holding both left and right buttons, tilt leg support up or down to the desired position.

23. TO FIT THE BOOTCOVER



A Raise the leg support to the horizontal position. Hook the bootcover 'pocket' under the leg support.



B Pull the top of bootcover under the armbar and then back over the top.



C Connect the press studs to keep in place. The Bootcover is now ready for use.

24. TO USE THE BASKET

NOTE: When a child is in the Second Seat, basket access is recommended only from the sides, or from the front on 4 wheel models only. There is no front access to the basket on 3 wheel models.



A Access is available from either side by undoing the zippers.



B Access is available from the front by undoing the zipper on 4 wheel models only.



C Access is available from the rear of the Stroller.

25. TO USE THE FOOTMUFF (PURCHASED SEPERATELY)

NOTE: Always secure the harness through the strap holes before use.



A To prepare the Stroller for fitment of the footmuff, firstly, ensure the head pillow height is correctly adjusted for your child, see section 16. Fold the canopy back, disengage one side of the armbar and rotate to the side of the frame, see section 12D.



B Undo the buckle prongs from the buckle housing, then release the buckle rings from the buckle prongs. Remove the reversible seat pad & shoulder pads.



C To fit the footmuff into the Stroller, first unzip the top section from the padded bottom section and set the top section aside. Place the padded bottom section into the Stroller seat.



D Thread the harness through the slots in the footmuff. Start by threading both lap strap buckle prongs through the pair of slots in the middle section of the footmuff.



E The footmuff features 3 pairs of shoulder strap slots to cater for different shoulder strap height positions. Thread the shoulder strap buckle rings through the appropriate shoulder strap slots in the footmuff.



F Thread the buckle housing & crotch pad through the crotch slot in the footmuff. Fit the reversible shoulder pads if desired.

25. TO USE THE FOOTMUFF - CONTINUED



G The footmuff is now ready for use. Place the child in the Stroller and connect the harness buckle. Ensure the harness buckle is correctly engaged (see section 18). Zip together the top & bottom sections of the footmuff.



H Engage the other side of the armbar (see section 12). Roll the top section of the footmuff over the armbar and secure with the elastic and toggle if required.

26. TO FIT THE MESH COVER



A To fit the mesh cover over the Stroller seat or Infant Carrier, place the elastic section of the mesh cover over the front section of the canopy.



B Wrap the elastic loops around the Stroller handle tube and attach together using the clip.



C When fitted to the Stroller, the front section of the mesh cover will rest on the leg support.

26. TO FIT THE MESH COVER - CONTINUED



D Lift the fabric cover as required or lower for most protection.



E To fit the mesh cover over the bassinet, place the elastic section of the mesh cover over the front section of the canopy.



F Wrap the elastic loops and clips around the hook and pile strips and attach together using the clip.



G To fit the mesh cover over the Second Seat, place the elastic section of the mesh cover over the front section of the canopy.



H Wrap the elastic loops and clips around the bars at both sides of the Second Seat.



Attach using the clip.

27. TO FIT THE RAINCOVER



A1 To fit the raincover to the Stroller - Place over the Stroller canopy as shown. Loop the elastic section over the Stroller seat leg support.



A2 Pull the rear raincover section down between the handle and down the back of the Stroller.



A3 Join the hook and pile around the handle tube.



A4 The raincover can be fitted to the Stroller seat when in forward or rear facing mode.



B1 To fit the raincover to the Stroller and Second Seat - Follow step A1, then pull the rear raincover section down between the handle and over the back of the Second Seat as shown above. Attach the hook and pile as described in A3 above.



C1 To fit the raincover to the Infant Carrier - Place over the Infant Carrier canopy as shown. The elastic section will hang over the front of the Stroller.

27. TO FIT THE RAINCOVER - CONTINUED



C2 Pull the rear raincover section down between the handle.



C3 Join the hook and pile around the handle tube.



D1 To fit the raincover to the Infant Carrier and Second Seat - Follow step C1, then pull the rear raincover section down between the handle and over the back of the Second Seat as shown above. Attach the hook and pile as described in C3 shown left.



E1 To fit the raincover to the Bassinet - Place over the Bassinet canopy as shown. Loop the elastic over the front of Bassinet.



E2 Join the hook and pile around the handle tube.

BASSINET ASSEMBLY & OPERATION

28. BASSINET ASSEMBLY, FITTING & REMOVAL (OPTIONAL ACCESSORY)

WARNING: Remove Stroller seat or Infant Carrier from the frame before fitting Bassinet.

WARNING: Always remove your child from the Bassinet before fitting or removing from

the Stroller.

WARNING: Bassinet must always face towards the handle.

WARNING: The Bassinet must be removed from the frame before folding.

WARNING: Do not lift Stroller by the Bassinet. Only use Strider Bassinet with the Strider

Plus Stroller. Use a harness once the baby can sit up unaided.



A To assemble bassinet, locate straps in the centre of the frame support rods and pull straps slowly outwards until each rod slides and locks under all 4 clips.



B Frame support rods are locked under all four clips.



C Push down lightly on the top edges of the bassinet to check that the frame supports are firmly locked in place.



D Open canopy by pressing and holding each button on the outside of canopy pivot joint before rotating carry handle bar to vertical position.



E Fit the liner by aligning the opening with the main locking lever and stretching it over both corners of the Bassinet. Ensure body band faces upwards.



F Fasten hook and loop strip just under the main locking lever.

BASSINET ASSEMBLY & OPERATION

28. BASSINET ASSEMBLY, FITTING AND REMOVAL - CONTINUED



G Fasten hook and loop tabs around the handle mouldings and stretch the liner over the other two corners of the bassinet.



H Fold canopy down (refer to item 28D). Insert the pad into the bassinet with head rest located at the canopy end.



I Attach hook and loop tabs on canopy to the liner on both side and in 2 places near the main locking lever.

NOTE: The bassinet can only be installed rearward (facing mother position) on the Stroller frame. The frame will not fold with bassinet installed so it must be removed before folding.



J Line up plastic moulding on sides of Bassinet with sockets in the middle of Stroller frame.



K Lower the Bassinet all the way down until it engages into the sockets on both sides.



L Ensure Bassinet is securely locked on by trying to pull up.

BASSINET ASSEMBLY & OPERATION

28. BASSINET ASSEMBLY, FITTING AND REMOVAL - CONTINUED



M To remove Bassinet from the Stroller, firmly lift up and unlock the main lever



N Continue to hold lever up and once released, lift the bassinet out of the Stroller.



NOTE: A body band is also installed in the base of the Bassinet for optional use. To use the body band, remove the mattress, open the body band, and then place the mattress back into the Bassinet. When not in use store body band under the mattress.



NOTE: D-rings are installed in the base of the bassinet for optional baby harness installation. Baby harness is not supplied but can be purchased separately at an independent baby shop.

INFANT CARRIER ASSEMBLY & OPERATION

 
29. INFANT CARRIER FITTING AND REMOVAL (SOLD SEPARATELY)

WARNINGS:

- Do not leave the child in the carrier for extended periods.
- The carrier is designed to provide mobility outside of the car but it should not be used instead of an appropriate cot.
- Ensure the carrier must be correctly fitted and locked into the Stroller.
- The carrier must only be used with an SC or Steelcraft Stroller with compatible attachments.
- To be used only in a rearward facing position, that is facing toward the Stroller handle.
- Use only for a child weighing up to 9kgs and with a length of up to 700mm.
- Remove Infant Carrier from Stroller frame before folding.









B Push down on the Infant Carrier and make sure it is located in the frame mouldings. The Infant Carrier now needs to be locked securely into the frame.

INFANT CARRIER ASSEMBLY & OPERATION

29. INFANT CARRIER FITTING AND REMOVAL - CONTINUED



C By squeezing in and holding the latches on either side of the handle, rotate the handle backwards. The GREEN Indicator will now turn to RED.



D Release the handle latches. Then with one hand holding the front of the Infant Carrier, push the Infant Carrier handle all the way down until you hear it lock into the frame.



E The handle indicator should now be GREEN and the Infant Carrier should be locked into the frame. If indicator is RED the Infant Carrier handle is not in the locked position, repeat step D.



F IMPORTANT: Pull up on both sides of the Infant Carrier and confirm it is locked into the frame. If not locked in on both sides, repeat steps A to E.



G Secure your baby into the Infant Carrier by the harness provided.



H To remove the Infant Carrier, squeeze both handle latches in to release the locks. The indicator will now be RED.

INFANT CARRIER ASSEMBLY & OPERATION

29. INFANT CARRIER FITTING AND REMOVAL - CONTINUED



I Continue to rotate the handle forward until it returns to the upright position. Release the latches, the indicator should now be GREEN.



J Lift and remove the Infant Carrier away from the Stroller.

ASSEMBLY & OPERATION

30. TO FOLD/CLOSE THE STROLLER

Remove the Bassinet or Infant Carrier if connected to the frame prior to folding. The rain cover must also be removed it fitted.

NOTE: Seat unit and wheels can be removed to reduce the total folded size if required. See sections 4 or 5 & 14 for reference. With the seat attached, adjusting and folding the leg support will also help to reduce folded size.

FOLDING TIPS (Refer to photos following the folding proceedure)

A. It is recommended for easier handling, to take the Stroller seat off first. Then fold the frame and put both seat and frame in the car.

- B. For smaller cars it may also be convenient to simply remove the rear wheels as well.
- C. If you choose to keep the Stroller seat attached, ensure the Stroller seat is forward facing prior to folding. This will achieve a more compact fold.



A Engage rear brakes. Remove all objects from seat back pocket and basket and close the canopy before folding.



B If seat unit is attached and in child facing away from parent mode, then adjust the backrest to most upright position.



C If seat unit is attached and in child facing parent mode, then adjust the backrest to most reclined position.

ASSEMBLY & OPERATION

30. TO FOLD/CLOSE THE STROLLER - CONTINUE



D Release the front wheels into swivel mode to allow for more compact folding as shown above for 4 wheel models. Refer to section 7 for 3 wheel models.



E Return the pivot handle to the straight position.



F Pull release mouldings 1 & 2 all the way up and hold to release the frame locks.



G Push down on the handle and the frame will begin to fold.



H Fold all the way down until the frame lock engages.



Frame lock engaged.

ASSEMBLY & OPERATION

30. TO FOLD/CLOSE THE STROLLER - CONTINUE

Compact Folding Tips



Stroller seat separated from the frame prior to folding.



The two separate components shown after folding.



 
Separation of the Stroller seat and frame promotes easier handling and storage.

31. TO USE THE SECOND SEAT

WARNINGS:

- The Second Seat cannot be used in conjunction with the Bassinet.
- The Second Seat must only be used with a SC or Steelcraft Stroller with compatible attachments.
- Second Seat to be used only in a forward facing position. That is connected to the rear of the Stroller and facing towards the Stroller.
- The Second Seat must be correctly fitted and locked onto the Stroller.
- Use only for a child weighing up to 15kgs.
- A five-point harness is provided to restrain your child. To secure the child in the harness, push buckles (A) through the buckle rings (B) and into the buckle housing (C) until the buckle prongs snap into position. Carefully adjust the harness by pulling the sliders (D) until the desired fit is achieved in the lap, shoulder and crotch straps. Always adjust the harness when changing the seating position of the child. To release the buckle, squeeze the top and bottom buckle prongs (A). Refer to section 18.







DO NOT install the Stroller seat in a rearward facing position when used in conjunction with the Second Seat.

31. TO USE THE SECOND SEAT - CONTINUED

Parts supplied with Second Seat

- SS1. Second Seat assembly
- SS2. Second Seat engaging pins (2)
- SS3. One hand, 4 position reclining backrest
- SS4. Adjustable /removable canopy
- SS5. Safety lock
- SS6. Adaptors (2)
- SS7. Head Pillow
- SS8. Shoulder pads (2)



31. TO USE THE SECOND SEAT - CONTINUED

31.1 To fit Second Seat to the Stroller

NOTE: For easier installation, rotate the Pivotal Handle in the most upright position.



A Remove the Accessory Bag if fitted. Apply the Stroller brake, rotate the pivot handle up to create more assembly space. Adjust the Stroller seat to the most upright position.



B The Second Seat connecting pins (SS2) need to lock into the frame mouldings (S29).



C Hold the Second Seat and hook the connecting pins (SS2) down into the frame mouldings (S29). Inset photo shows correct engagement.



D Now allow the Second Seat to drop down and lock into the lower Stroller frame mouldings (S31).



E Pull up on the Second Seat frame to make sure it is locked onto the Stroller frame. Ensure to grasp the Second Seat frame as shown above.



F Lift up by the head end of the Second Seat so that the foot end of the Second Seat slides down the Stroller frame and engages into the second lock (SS5).

31. TO USE THE SECOND SEAT - CONTINUED

31.2 To adjust into seating positions



A Adjust to desired seating position by using the one hand backrest adjusting lever. Lift the lever all the way up and at the same time, lift up on the seat.




B The seat will slide up and down the frame. Lock into any one of 4 seating positions by releasing the backrest adjusting lever at the desired position.

31.3 To fit, use and remove the canopy

Refer to section 17. To fit, use and remove the Second Seat canopy is the same as the Stroller seat canopy.

31.4 Harness adjustment

A five-point harness is provided to restrain your child. To secure the child in the harness, push buckles (A) through the buckle rings (B) and into the buckle housing (C) until the buckle prongs snap into position. Carefully adjust the harness by pulling the sliders (D) until the desired fit is achieved in the lap, shoulder and crotch straps. Always adjust the harness when changing the seating position of the child. To release the buckle, squeeze the top and bottom buckle prongs (A).

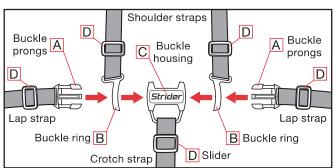



31. TO USE THE SECOND SEAT - CONTINUED

31.5 Reversible shoulder pads

NOTE: The shoulder pads are reversible.



A Fit the reversible shoulder pads by fitting around the harness shoulder strap and attach the hook and pile.



B Repeat for the other reversible shoulder pad.



C The reverse side of the shoulder pad has a different fabric pattern. To reverse, undo the hook and pile and reattach on the reverse side.

31.6 To adjust the head pillow and harness shoulder strap height position



A The head pillow has a small height adjusting range. Attach to the best suited hook and pile position as required.



B The harness straps are threaded through the head pillow so the shoulder strap height is adjusted when the head pillow height is adjusted.

31. TO USE THE SECOND SEAT - CONTINUED

31.7 To fold the Second Seat while attached to the frame

WARNING: Remove the child from the Second Seat before attempting to fold

NOTE: Fold the Second Seat before folding the Stroller.



A Fold the canopy back, then fully lift up the backrest adjusting lever and hold in this position.



B At the same time, push down on the Second Seat, the foot end of the Second Seat slide will slide up and stop at the safety lock position (lowest recline position).



C The image above shows the Second Seat at the safety lock position (lowest recline position).



D While still holding the backrest adjusting lever up, slide the grey safety lock button (SS5) up, then lower the head end of the Second Seat.



E Continue to lower the Second Seat, the foot end of the Second Seat will slide up the frame to the folded position.



F The Second Seat is shown in the fully folded position above. To fold the Stroller frame see section 30. You may need to adjust the pivot handle if it interferes with the frame.

31. TO USE THE SECOND SEAT - CONTINUED

31.8 To remove Second Seat from the frame


WARNING: Remove the child from the Second Seat before attempting to fold.



A First, fold the Second Seat up under the frame - see item 31.7.



B With the Second Seat in the folded position, locate the two grey release buttons (S30) on the sides of the frame

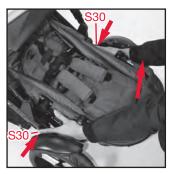

C Hold the sides of the Second Seat with each hand. Simultaneously press in and hold both grey release buttons, at the same time lifting the seat up away from the Stroller frame.



D Now push the Second Seat up in the direction indicated by the arrow, so the Second Seat connecting pins (SS2) lift out of the frame mouldings (S29).



E Lift the second seat out and away from the frame.

31. TO USE THE SECOND SEAT - CONTINUED

31.9 To use the adaptors with the Stroller seat


NOTE: Adaptors are supplied to create more space if required, when using the Second Seat.

For correct connection to the Stroller frame, the adaptors move the Stroller seat mounting closer to the front of the Stroller.

DO NOT install the Stroller seat in a rearward facing position when used in conjunction with the Second Seat.



A Align the adaptor with the Stroller frame mouldings as shown, and ensure the adaptor extends towards the front of the Stroller and the ribbed section of the mouldings face inwards.

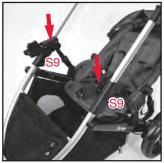

B Press down on the adaptors to lock into the Stroller frame mouldings (S9).



C Pull up on the adaptors to make sure they are locked on.



D Lock the Stroller seat into the adaptors in the forward facing position. WARNING: Stroller seat must be correctly attached, see fitting and removal sections 11 & 14.



E Adjust the Stroller backrest angle as required.

31. TO USE THE SECOND SEAT - CONTINUED


31.10 To use the adaptors with the Infant Carrier.

NOTE: Adaptors are supplied to create more space if required, when using the Second Seat. For correct connection to the Stroller frame, the adaptors move the Infant Carrier mounting closer to the front of the Stroller.

DO NOT install the Infant Carrier in a forward facing position, even when used in conjunction with the Second Seat. The Infant Carrier must always face rearward.



A Align the adaptor with the Stroller frame mouldings as shown, and ensure the adaptor extends towards the front of the Stroller and the ribbed section of the mouldings face inwards.

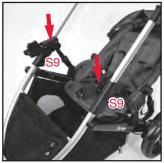

B Press down on the adaptors to lock into the Stroller frame mouldings (S9).



C Pull up on the adaptors to make sure they are locked on.



D Lock the Infant Carrier into the adaptors, with the Infant Carrier facing towards the Stroller handle. WARNING: Infant Carrier must be correctly attached, refer to section 29.



E Pull up on the Infant Carrier to make sure it is locked in.

CARE & MAINTENANCE

To prolong the life of your nursery product keep it clean and do not leave it in the direct sunlight for extended periods of time.

Removable fabric covers and trims may be cleaned using warm water with a household soap or a mild detergent. Allow it to dry fully, preferably away from the direct sunlight.

DO NOT DRY CLEAN, OR USE BLEACH.

Do not machine wash, tumble or spin dry, unless the care labelling on the product permits these methods.

Non removable fabric covers and trims may be cleaned using a damp sponge with soap or mild detergent. Allow it to dry completely before folding or storing it away.

In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.

To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories tested and approved by Britax.

WARRANTY

Each Steelcraft unit is thoroughly inspected in our Quality Assurance department prior to delivery. In the unlikely case that you find any faulty material or workmanship that affects the units normal operation, we will repair the unit free of charge within 12 months of purchase. You are required to present your receipt as proof of purchase. For all concerns with your product please contact our Customer Service team.

CUSTOMER SERVICE

1300 303 330 - Australia 0508 688 822 - New Zealand
Please read all the information carefully before using this product. This warranty does not apply to failure due to improper care, or normal wear and tear caused by product use. We reserve the right to inspect the unit. You may be charged for repairs if the product has been damaged accidentally.

NEW ZEALAND

BRITAX CHILDCARE NZ. Limited. A Britax International company.

101 Diana Drive, Glenfield, Auckland 9, New Zealand. Phone: (09) 443 0102 Fax: (09) 443 0120 Distributed by:

AUSTRALIA

BRITAX CHILDCARE PTY.LTD. A Britax International company. (Incorporated in Victoria) A.B.N. 55 006 773 600 99 Derby Road Sunshine, Victoria 3020, Australia Phone: (03) 9288 7288 Fax: (03) 9311 5798

Due to our continuing program of development, Britax reserves the right to alter the specifications, colour or design without any further notice.

The Steelcraft, Strider and Strider Plus trademark the property of Britax Childcare Pty. Ltd-Australia.

The Britax trademark is the property of Britax Excelsior Limited - UK.

Visit the Britax website at: http://www.britax.com.au or email us at custserv@britax.com.au

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

© 2009 Copyright Britax Childcare Pty. Ltd. Australia.

